

Makes comfortable care even simpler:
the bock storeline®



Bedsideside cabinet storeline® t300



Bedsideside cabinet storeline® t103 with
flexible server s100

.bock® ///



Everything within easy reach:
for residents and caregivers.

The bedside cabinets and servers of the bock store-line® make daily life more comfortable for caregivers and residents. Choose from a broad portfolio that offers more than just complete styling freedom: from temporary mobile solutions to large bedside cabinets incl. servers, you are guaranteed to find the perfect solution for your care situation.

Contents

bock storeline®



Bedside cabinets bock storeline® t100, t101, t102, t103,

Bedside cabinets in various designs

Page 4



Bedside cabinets bock storeline® t200, t300,

Bedside cabinets with integrated server tray

Page 10



Servers bock storeline® s100, s200, s300

Overbed tables in various designs

Page 13

Colours and variants

Page 19

bock storeline®

Bedside cabinets t100-t103

Maximum scalability:
From little side table
to big helper.

The bock storeline® t100-t103 bedside cabinets offer complete freedom of choice. Whichever you choose, they simplify your daily care routine from day one, because everything can be stored within easy reach of both residents and caregivers.



bock storeline® t100

Bedside cabinet "server-ready" with drawer, door and open shelf

The storeline® t100 bedside cabinet is the logical companion to the bock nursing care beds. It safely keeps personal belongings within easy reach.



Pays off:

The bock storeline® t100-103 bedside cabinets can be fitted with the flexible storeline® s100 server at any time. The storeline® s100 can be attached on either side without tools, making it a highly versatile and economical option.

More information on page 14



bock storeline® t100

Dimensions

Width	506 mm
Depth	450 mm
Height	788 mm
Compartment size of small drawer	100 × 430 × 330 mm (H×W×D)
Compartment size of open shelf	180 × 460 × 400 mm (H×W×D)
Compartment size behind door	350 × 460 × 400 mm (H×W×D)

Weights

Net weight	approx. 37.75 kg
------------	------------------

Additional features

Four double castors, including two with lock	
Wheel diameter	50 mm

All specifications refer to the closed cabinet

Colours and further options can be found on page 19.

bock storeline® t101

"Server-ready" bedside cabinet with drawer, deep drawer and open shelf

The storeline® t101 bedside cabinet is another possible companion to a bock nursing care bed. The deep drawer makes it easier to store and retrieve items, such as bottles, which have been stored there.



Pays off:

The bock storeline® t100-103 bedside cabinets can be fitted with the flexible storeline® s100 server at any time. The storeline® s100 can be attached on either side without tools, making it a highly versatile and economical option.

More information on page 14



bock storeline® t101

Dimensions

Width	506 mm
Depth	450 mm
Height	788 mm
Compartment size of small drawer	100 × 430 × 330 mm (H×W×D)
Compartment size of open shelf	180 × 460 × 400 mm (H×W×D)
Compartment size of deep drawer	320 × 430 × 330 mm (H×W×D)

Weights

Net weight	approx. 37.75 kg
------------	------------------

Additional features

Four double castors, including two with lock	
Wheel diameter	50 mm

All specifications refer to the closed cabinet

Colours and further options can be found on page 19.

bock storeline® t102

“Server-ready” bedside cabinet with drawer, deep drawer, pull-out tray and open shelf

The storeline® t102 bedside cabinet bestoves with its pull-out tray, that serves as a quickly accessible and secure extension of the storage surface. In addition, a deep drawer makes it easier to store and retrieve items.



Pays off:

The bock storeline® t100-103 bedside cabinets can be fitted with the flexible storeline® s100 server at any time. The storeline® s100 can be attached on either side without tools, making it a highly versatile and economical option.

More information on page 14



bock storeline® t102	
Dimensions	
Width	506 mm
Depth	450 mm
Height	788 mm
Tray size	445 × 400 mm (H×W×D)
Compartment size of small drawer	85 × 430 × 330 mm (H×W×D)
Compartment size of open shelf	130 × 460 × 400 mm (H×W×D)
Compartment size of deep drawer	320 × 430 × 330 mm (H×W×D)
Weights	
Net weight	approx. 37.75 kg
Additional features	
Four double castors, including two with lock	
Wheel diameter	50 mm
All specifications refer to the closed cabinet	
Colours and further options can be found on page 19.	

bock storeline® t103

“Server-ready” bedside cabinet with drawer, deep drawer, two pull-out trays and open shelf

The storeline® t103 bedside cabinet with two pull-out trays is the logical companion to the bock nursing care bed range. It safely keeps personal belongings within easy reach and, when the deep drawer is open, easily visible from above. The integrated pull-out trays serve as a quickly accessible and secure extension of the storage surface: the lower tray can be used by residents to conveniently place drinks or personal items, even from a low bed height. In addition, a deep drawer makes it easier to store and retrieve items, e. g. drinks.



Pays off:

The bock storeline® t100-103 bedside cabinets can be fitted with the flexible storeline® s100 server at any time. The storeline® s100 can be attached on either side without tools, making it a highly versatile and economical option.

More information on page 14



bock storeline® t103	
Dimensions	
Width	506 mm
Depth	450 mm
Height	788 mm
Tray size	445 × 400 mm (H×W×D)
Compartment size of small drawer	85 × 430 × 330 mm (H×W×D)
Compartment size of open shelf	70 × 460 × 400 mm (H×W×D)
Compartment size of deep drawer	320 × 430 × 330 mm (H×W×D)
Weights	
Net weight	approx. 37.75 kg
Additional features	
Four double castors, including two with lock	
Wheel diameter	50 mm
All specifications refer to the closed cabinet	
Colours and further options can be found on page 19.	



The bock storeline® t103 bedside cabinet with the flexible storeline® s100 server is the ideal addition to a nursing care bed from bock.

bock storeline®

Bedside cabinets t200-t300

Always at your side:
Bedside cabinets with a practical overbed table

The bock storeline® t200-t300 expands your options when choosing a bedside cabinet that completes ones furniture concept.



bock storeline® t200

Bedside cabinet with drawer, door, open shelf and integrated overbed table

The integrated, height-adjustable overbed table instantly serves as an additional storage surface. It provides ideal support in everyday situations, e.g. when serving meals or during the daily care routine. Thanks to the height adjustment, the cabinet can be adapted to different requirements, according to the situation.



bock storeline® t200	
Dimensions	
Width	525 mm
Depth	425 mm
Height	880 mm
Overbed table width	648 mm
Overbed table depth	333 mm
Height adjustment range of overbed table	325 - 945 mm
Additional features	
Four double castors, including two with lock	
Wheel diameter	50 mm
All specifications refer to the closed cabinet	
Colours and further options can be found on page 19.	

bock storeline® t300

Bedside cabinet with drawer, door, open shelf, overbed table and towel rail

The drawer and cabinet doors can be opened on both sides, allowing the flexible use of the storeline® t300 on either the left or the right side of the bed. For extra safety, the drawer cannot be pulled all the way out. The overbed table mechanism is supported by a lifting aid. Behind the doors is a slidable storage shelf, which can be secured on the side of use.

The integrated overbed table instantly serves as an additional practical storage surface. It provides ideal support in everyday situations, e.g. when serving meals or during the daily care routine.

Simple solution: When the integrated overbed table is not in use, the rail can be used as a practical towel holder.



bock storeline® t300	
Dimensions	
Width	530 mm
Width incl. towel holder	600 mm
Depth	450 mm
Height	865 mm
Overbed table width	670 mm
Overbed table depth	373 mm
Additional features	
Four double castors, including two with lock	
Wheel diameter	50 mm
All specifications refer to the closed cabinet	
Colours and further options can be found on page 19.	

bock storeline®

Server s100 – s300

Flexible helpers for comfortable living and care

The servers in the bock storeline® s100 – s300 are the perfect add-on for use by residents and caregivers. The flexible fold-out tables expand the functionality of your bedside table precisely when needed.

Various small details simplify your daily care routine – in conjunction with a high-quality finish and the latest technology.



bock storeline® s100

Flexible servers for the storeline® t100 bedside cabinet series with stepless height adjustment, swivelling overbed table and fixed shelf

The flexible storeline® s100 server with stepless height adjustment and swivelling overbed tabletop is the perfect companion for the bock bedside cabinets of the storeline® t100 series.

The storeline® s100 can be attached to either the left or right side in no time at all and without any tools, according to your individual preferences. The overbed table is a practical storage solution and provides ideal support in everyday situations, e.g. when serving meals or during the daily care routine. The inclinable tabletop supports an ergonomic, comfortable reading position, while the stop strips prevent items from slipping off. Thanks to the gas spring mechanism with an automatic actuator, the height is individually and steplessly adjustable.

The fixed part with multifunctional handle can be used to hold a pair of reading glasses or a drink. The handle can be also used as a towel holder, for example.

The large double castor ensures optimal stability and supports simple assembly.



Simply attach. Securely anchored. And detach. Shown here on a t101.



bock storeline® s100		
Dimensions		
Swivelling tabletop	Width	550 mm
	Depth	380 mm
Fixed shelf	Width	160 mm
	Depth	380 mm
Load capacity of tabletop	up to 10 kg	
Height adjustment range	725 - 1050 mm	
Swivel range	max. 45°	
Double castors with lock	Ø 65 mm	

bock storeline® s100

All advantages:

- ⊕ Flexible add-on to your bock bedside cabinets (t100-t103)
- ⊕ Stepless height adjustment and swivelling tabletop for maximum comfort
- ⊕ Quick, tool-free add-on either to the left or right side
- ⊕ Fixed shelf with multifunctional handle
- ⊕ Easy to clean, easily wipeable
- ⊕ A large double castor ensures optimal stability
- ⊕ Tabletop with high load capacity for safe provision of basic care





The bock storeline® t103 bedside cabinet with the flexible storeline® s100 server is the ideal addition to a nursing care bed from bock.

bock storeline® s200

Handy server with stepless height adjustment, swivelling and folding overbed table and fixed shelf

The handy storeline® s200 server with stepless height adjustment and a swivelling tabletop is a flexible companion for the bock nursing care bed.

The overbed table is a practical storage solution and provides ideal support in everyday situations, e.g. when serving meals or during the daily care routine.

The inclinable tabletop supports an ergonomic, comfortable reading position, while the stop strips prevent items from slipping off. Thanks to the gas spring mechanism with an automatic release, the height is individually and steplessly adjustable.

The fixed part with multifunctional handle can be used to hold a pair of reading glasses or a drink. The handle can be also used as a towel holder, for example.

The extremely stable base frame, consisting of a C-oval profile tube with four large, individually lockable double castors, ensures excellent manoeuvrability and stability.

Support for carers:

The tabletop can bear up to 10 kg of weight, allowing safe and comfortable provision of care in bed with a washbowl.



bock storeline® s200		
Dimensions		
Swivelling tabletop	Width	550 mm
	Depth	380 mm
Fixed shelf	Width	160 mm
	Depth	380 mm
Base frame	Width	770 mm
	Depth	425 mm
Load capacity of tabletop		10 kg
Height adjustment range		760 - 1080 mm
Swivel range		max. 45°
Four double castors with lock		Ø 65 mm

bock storeline® s300

“Basic” server with steplessly variable height adjustment, swivelling overbed table and fixed shelf

The storeline® s300 server with height adjustment and a swivelling tabletop is a flexible companion for the bock nursing bed.

The overbed table is a practical storage solution and provides ideal support in everyday situations, e.g. when serving meals or during the daily care routine.

The inclinable tabletop supports an ergonomic, comfortable reading position, while the stop strips prevent items from slipping off. Thanks to the gas spring mechanism with an automatic actuator, the height is individually and steplessly adjustable.

The fixed shelf with a multifunctional handle can be used to hold a pair of reading glasses or a drink.

The extremely stable base frame with four large, individually lockable double castors ensures excellent manoeuvrability and stability. For a homely atmosphere, the colour is available in a wood look to match the rest of the furniture.



bock storeline® s300		
Dimensions		
Swivelling tabletop	Width	620 mm
	Depth	400 mm
Fixed shelf	Width	220 mm
	Depth	400 mm
Base frame	Width	700 mm
	Depth	425 mm
Height adjustment range	750 - 1070 mm	
Swivel range	max. 45°	
Four double castors with lock	Ø 65 mm	

Colours and further options

Standard colours*



Cherry Havanna
R42006



Madison Walnut
R30011



Maple After Eight
R27017



Royal Maple
R27001




Sonoma Oak
R20128



Bloomed Beech
R24035



Steamed Beech
R24034

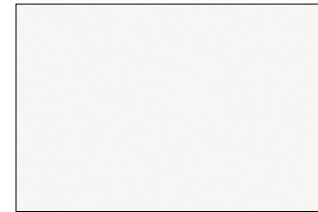

White
W10140

Ordering options

- ⊕ Drawers with soft-close function for greater comfort
- ⊕ Lockable compartments for more privacy
- ⊕ Individual colours for a homely feel

* not available for servers s100 and s200
(compact tabletops in aluminium colour)



.bock[®] ///

© registered trademark
Version 11 | 2022
Subject to technical changes.
Picture credits: Nicola Rehage, Gütersloh



Hermann Bock GmbH
Nickelstraße 12
33415 Verl
Germany

Phone: +49 (0) 5246 9205 0
Fax: +49 (0) 5246 9205 25
Internet: www.bock.net
E-Mail: info@bock.net